

LB 146

Spare parts

Ersatzteile


Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar



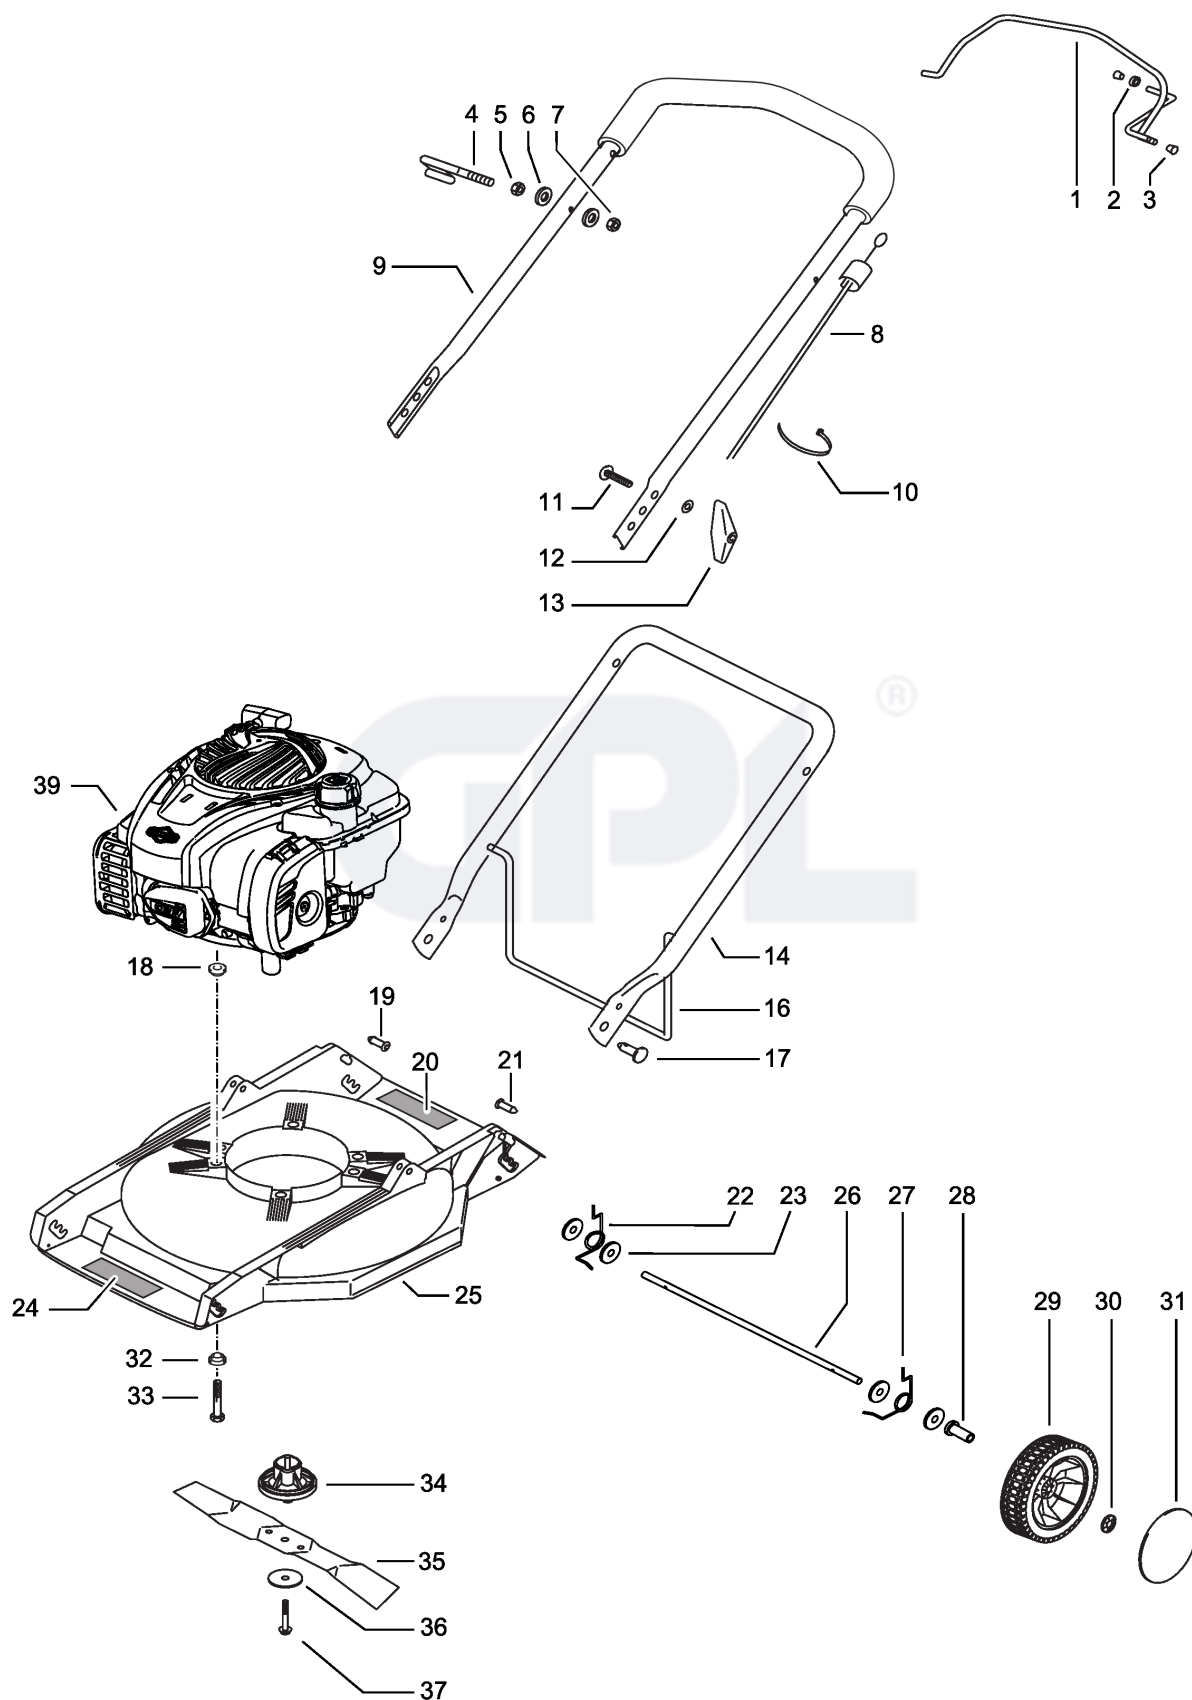

Item	PN	Description	Qty
1	511 90 75-64	bail arm	1
2	514 92 75-00	spacer	1
3	514 64 76-00	knob	2
4	531 20 51-69	cord guide	1
5	531 20 71-65	nut M6	1
6	514 02 66-00	washer	2
7	514 71 80-00	nut M6	1
8	513 10 68-00	cable brake	1
9	512 80 41-02	handle upper assy	1
10	531 20 55-81	tie wrap	2
11	514 99 45-01	coachbolt	2
12	514 02 66-03	washer	2
13	512 79 31-68	wing knob M8	2
14	516 44 34-11	handle lower	1
16	512 80 82-00	handle up stop	1
17	578 29 25-01	pivot pin	2
18	510 77 00-00	bush deck insulator	3
19	578 29 26-01	handle up stop rh	1
20	513 99 87-01	warning label	1
21	578 29 26-02	handle up stop lh	1
22	513 10 45-00	spring:wheel r/h	2
23	583 94 38-01	washer	8
24	513 11 80-00	label, Husqvarna logo	1
25	510 69 40-64	deck	1
26	513 10 28-00	axle shaft	2
27	513 10 45-01	spring:wheel l/h	2
28	513 90 60-00	wheel bush	4
29	512 82 83-00	wheel assy	4
30	514 90 31-00	starlock washer	4
31	512 79 93-74	hub cap	4
32	513 10 26-00	engine mount bush	3
33	514 91 67-00	bolt engine shanked	3
34	512 79 42-00	blade adaptor	1
35	583 97 40-10	blade	1
36	515 79 60-01	blade washer	1
37	584 81 23-01	blade bolt	1
39	———	engine, Briggs & Stratton, model number 09P6020049H1	1