

LB48V

Spare parts

Ersatzteile

Pièces détachées


Reserve onderdelen

Repuestos

Reservdelar


 **GPL**[®]

A LB48V
Deck

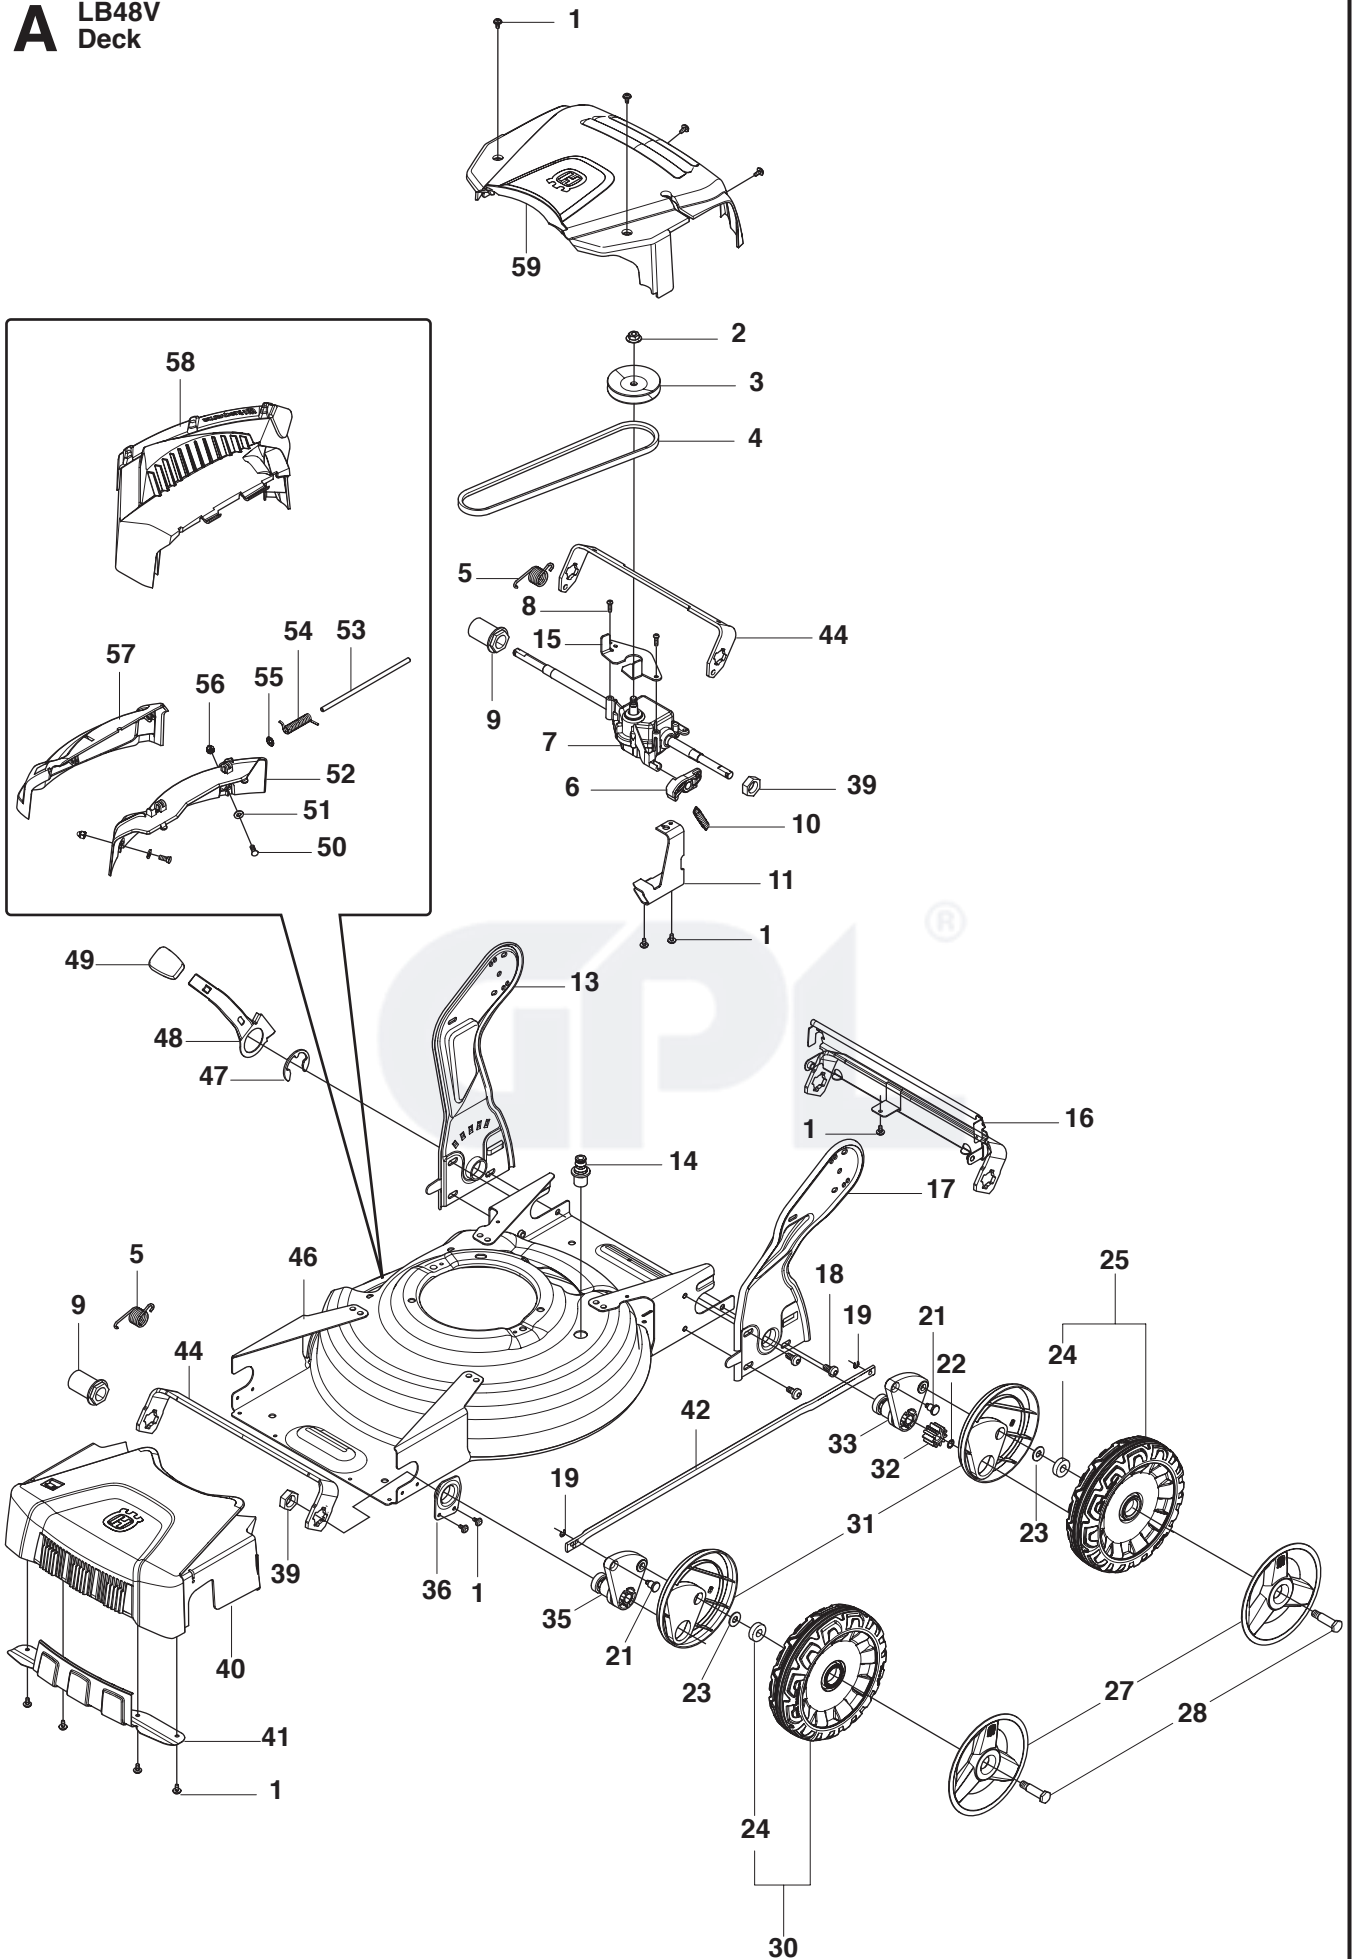

Page A LB48V DECK				
Position	Article	Quantity	Notes	Kit
1	502 43 52-01	17		
2	504 05 56-01	1		
3	504 05 33-01	1		
4	501 98 66-01	1		
5	522 02 46-01	2		
6	504 04 83-01	1		
7	504 04 80-01	1		
8	502 43 53-01	2		
9	522 02 40-01	2		
10	504 04 87-01	1		
11	504 04 86-01	1		
13	504 00 00-03	1		
14	531 20 58-48	1		
15	504 04 85-01	1		
16	504 64 15-01	1		
17	504 00 32-03	1		
18	504 64 16-02	6		
19	735 31 09-21	2		
21	504 62 50-01	2		
22	504 70 28-01	2		
23	505 22 14-01	4		
24	738 21 01-04	8		25, 30
25	544 91 69-02	2		
27	544 44 39-01	4		
28	544 45 34-01	4		
30	502 49 68-01	2		
31	504 62 41-01	4		
32	544 34 23-01	2		
33	504 70 98-01	2		
35	504 70 98-02	2		
36	504 62 49-01	2		
39	505 52 10-01	2		
40	502 62 44-01	1		
41	502 62 54-01	1		
42	504 61 55-01	1		
44	504 61 46-01	2		
46	501 37 55-01	1		
47	735 31 36-21	1		
48	504 83 82-01	1		
49	504 83 83-01	1		
50	505 15 61-01	2		
51	505 19 84-01	2		
52	504 58 46-01	1		
53	504 58 50-01	1		
54	504 58 53-01	1		
55	735 58 41-01	1		
56	502 30 50-01	2		
57	504 58 45-01	1		
58	510 04 76-01	1		
59	501 35 50-01	1		


B LB48V
Handle

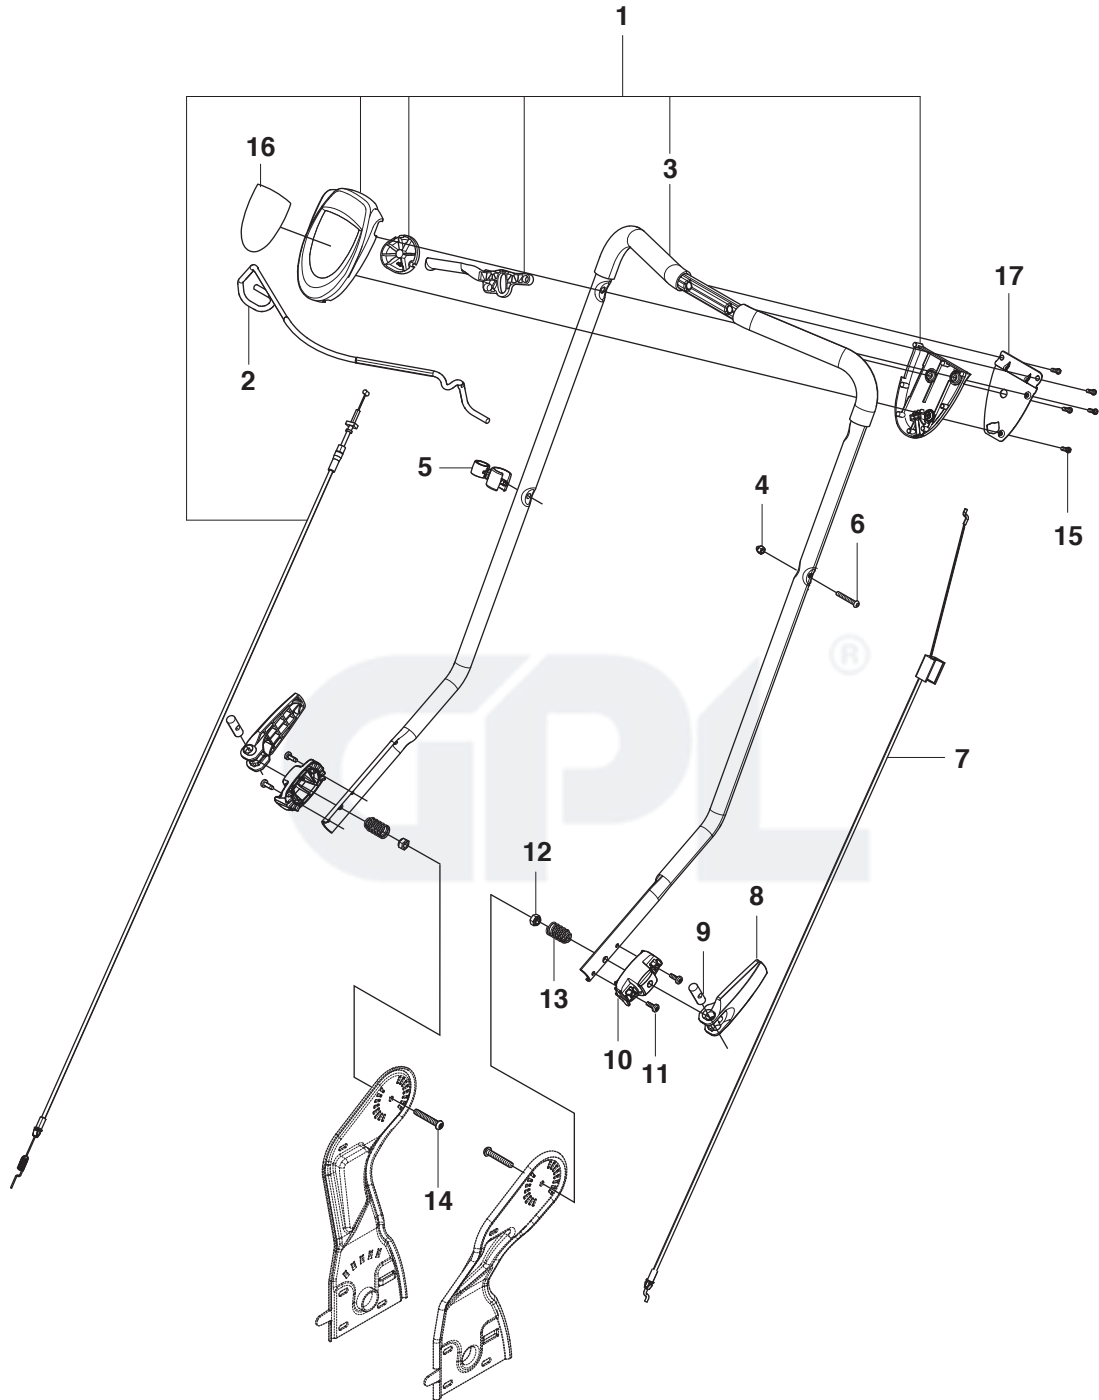

Page B LB48V HANDLE				
Position	Article	Quantity	Notes	Kit
1	544 93 29-05	1		
2	502 28 93-01	1		
3	581 21 66-01	1		1
4	502 30 50-01	1		
5	578 39 93-01	1		
6	505 55 77-02	1		
7	522 93 74-01	1		
8	504 13 83-01	2		
9	505 53 11-01	2		
10	580 77 62-01	2		
11	502 43 52-03	4		
12	522 91 94-01	2		
13	504 63 81-01	2		
14	505 52 46-01	2		
15	574 39 14-01	5		
16	544 92 81-01	1		
17	532 18 70-97	1		



C LB48V
Engine

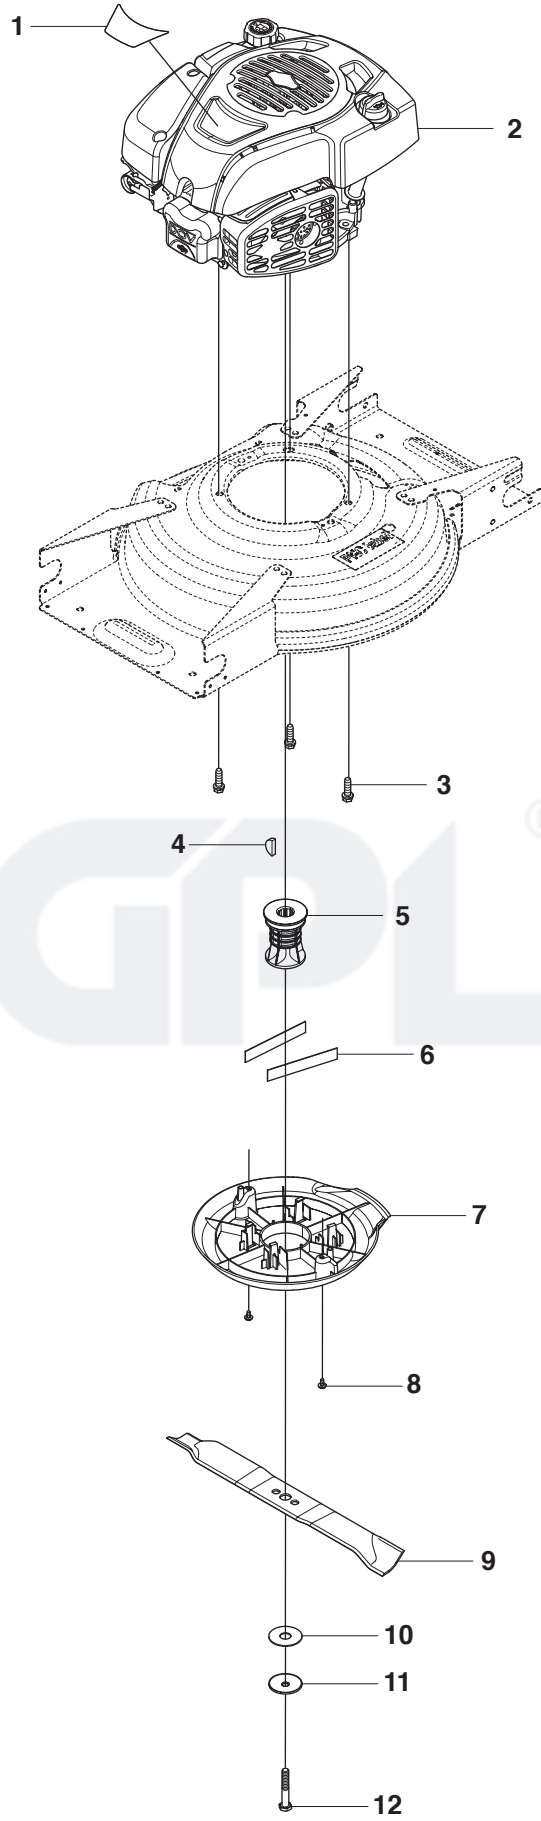

Page C LB48V ENGINE				
Position	Article	Quantity	Notes	Kit
1	521 88 88-03	1		
2		1	124T02-0204-B1, Briggs & Stratton	
3	531 21 28-51	3		
4	531 20 49-07	1		
5	531 20 78-48	1		
6	504 62 42-01	2		
7	501 96 81-01	1		
8	505 52 46-01	2		
9	502 88 13-02	1		
10	531 20 72-43	1		
11	531 20 72-37	1		
12	531 20 66-49	1		

