

# R53

**Spare parts**

**Ersatzteile**

**Pièces détachées**


**Reserve onderdelen**

**Repuestos**

**Reservdelar**

**GPL**®

# ROTARY LAWN MOWER - - MODEL NUMBER R53 (96131002304) PRODUCT NUMBER 961 31 00-23

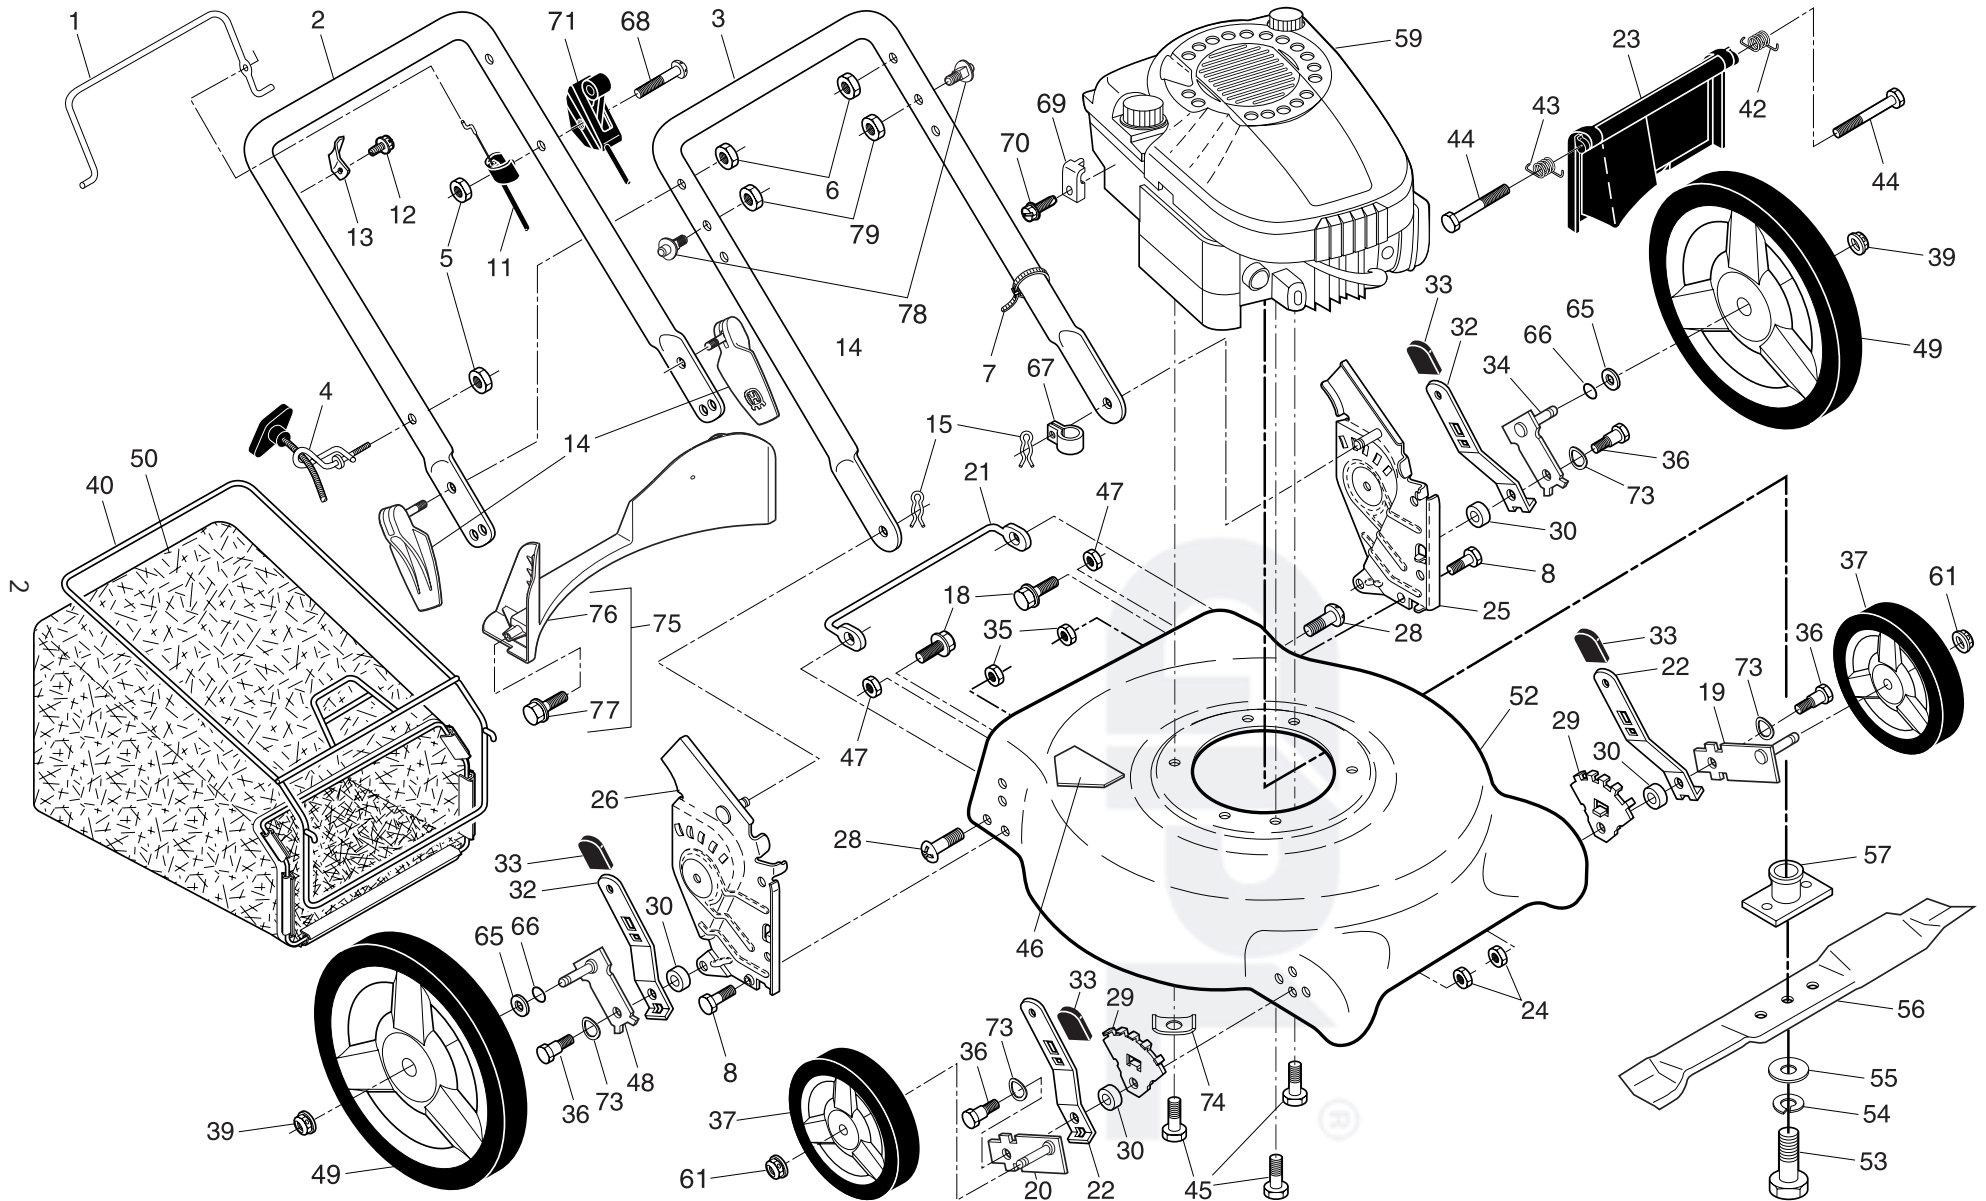

# ROTARY LAWN MOWER - - MODEL NUMBER R53 (96131002304) PRODUCT NUMBER 961 31 00-23

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532 40 29-49	Control Bar	45	532 15 04-06	Hex Head Thread Rolling Screw 3/8-16 x 1
2	532 41 73-42	Upper Handle	46	532 18 21-66	Danger Decal
3	532 41 70-31	Lower Handle	47	873 75 11-53	Nut, Hex
4	532 19 47-88	Rope Guide	48	532 41 06-01	Axle Arm Assembly, Rear, RH
5	532 13 20-04	Locknut, Hex 1/4-20	49	532 41 34-01	Wheel & Tire Assembly, Rear 12 x 1-3/4
6	<b>532 19 17-30</b>	Locknut, Hex 1/4-20	50	532 40 00-70	Grassbag
7	532 06 64-26	Wire Tie	52	532 41 39-59	Kit, Lawn Mower Housing (Includes Key Number 46)
8	874 78 05-12	Hex Bolt 5/16-18 x 3/4	53	532 85 10-84	Hex Head Screw 3/8-24 x 1-3/8 Grade 8
11	532 13 19-94	Engine Zone Control Cable	54	532 85 02-63	Helical Lockwasher
12	532 75 06-34	Hex Washer Head Screw #10-24 x 1/2	55	532 85 10-74	Hardened Washer
13	532 12 52-03	Up-Stop Bracket	56	532 19 93-77	21" Blade
14	532 41 66-68	Handle Knob	57	532 41 83-73	Blade Adapter
15	532 05 17-93	Hairpin Cotter	59	- - -	Engine, Briggs & Stratton, Model Number 122T02 (Order parts from engine manufacturer)
18	817 60 04-06	Screw 1/4-20 x 3/8	61	532 40 91-48	Nut, Hex, Flangelock
19	532 40 66-89	Axle Arm Assembly, Front, LH	65	532 08 83-48	Washer, Flat
20	532 40 66-90	Axle Arm Assembly, Front, RH	66	532 19 74-80	O-Ring
21	532 41 35-43	Footguard	67	532 19 79-91	Clip, Cable
22	532 40 64-28	Selector Spring, Front	68	532 18 33-65	Screw, Hex 1/4 x 20 x 2.17
23	532 41 06-03	Rear Door Assembly	69	532 11 11-90	B&S Cable Clamp
24	532 16 67-85	Locknut, Hex 5/16-18	70	532 08 38-16	Screw #10 x 5/8
25	532 41 39-24	Handle Bracket Assembly, LH	71	532 70 06-46	Throttle Control
26	532 41 39-25	Handle Bracket Assembly, RH	72	532 13 20-04	Nut, Hex, 1/4-20 BZO
28	532 05 45-83	Screw	73	532 40 16-30	Washer, Curved
29	532 41 05-94	Wheel Adjusting Bracket, Front	74	532 12 50-78	Washer, Engine
30	532 40 16-29	Spacer	75	532 41 36-93	Kit, Rear Baffle (Includes 3 Screws)
32	532 41 05-95	Spring, Selector, Rear	76	532 41 05-89	Baffle, Rear
33	532 08 78-77	Selector Knob	77	817 41 13-12	Screw, Rear Baffle
34	532 41 06-00	Axle Arm Assembly, Rear, LH	78	532 19 92-55	Stud
35	532 16 67-85	Locknut, Hex 5/16-18	79	532 75 11-53	Nut, Hex
36	532 40 16-38	Shoulder Bolt 5/16-18	--	532 18 21-91	Warning Decal (not shown)
37	532 41 31-83	Wheel & Tire Assembly, Front 8 x 1-3/4	--	532 41 13-14	Operator's Manual, European
39	532 40 91-49	Nut, Hex, Flangelock	--	532 41 13-15	Operator's Manual, Scandinavian
40	532 41 19-49	Frame, Grassbag	--	532 41 13-16	Operator's Manual, East Bloc
41	532 18 41-93	Bolt, Rear Door	--	532 41 13-17	Operator's Manual, Baltic
42	532 40 54-21	Spring, Rear Door, LH			
43	532 40 54-23	Spring, Rear Door, RH			

3

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.