

BC2126

Spare parts

Ersatzteile








Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar


GPL®

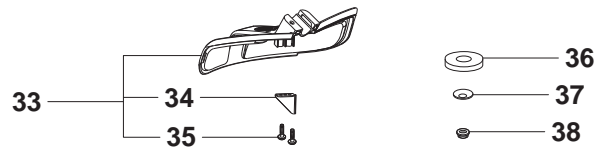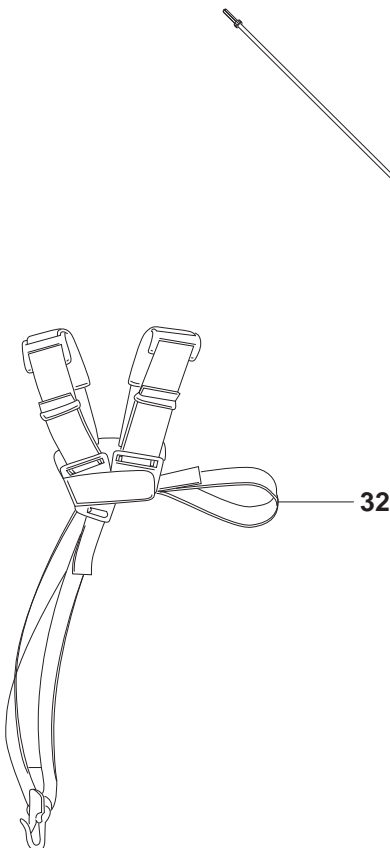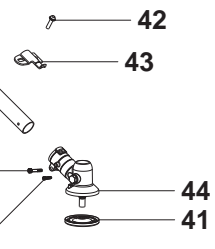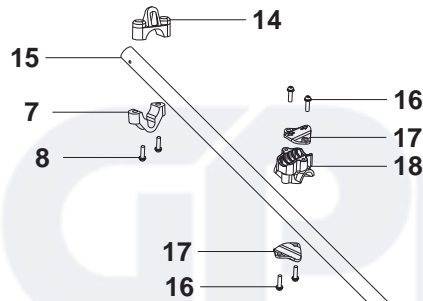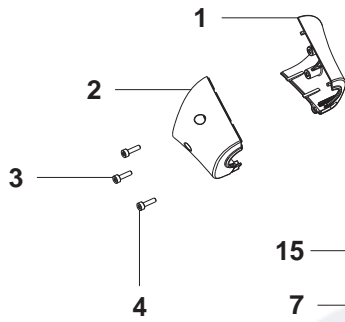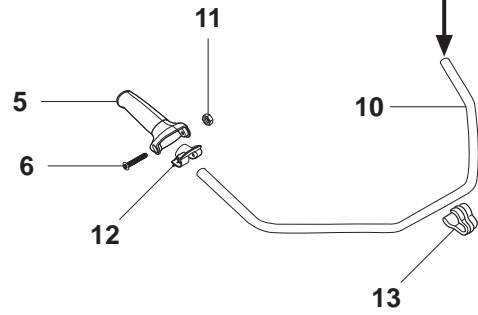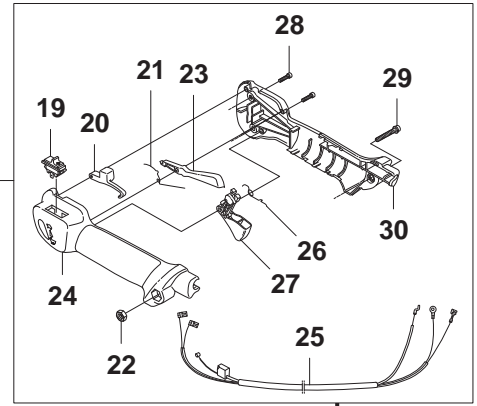

A

BC2126

Pos.	Part No.	Description	Qty.	Notes
1	545 03 64-02	Nose Cone	1	Left Hand
2	545 03 65-02	Nose Cone	1	Right Hand
3	530 01 64-48	Screw	2	
4	530 01 64-49	Screw	1	
5	537 17 28-10	Handle - Assist	1	New part
6	503 20 02-45	Bolt	1	New part
7	545 05 66-01	Clamp - Harness	1	Lower
8	530 01 59-40	Screw	2	
9	545 06 71-02	Assy - Throttle Housing	1	Incl.18,19,20,21,22, 23,24,25,26,27,28, 29
10	502 19 95-03	Handlebar	1	
11	731 23 14-01	Nut	1	New part
12	537 17 29-03	Cover - Assist Handle	1	New part
13	502 21 12-01	Clip - Handlebar	1	Upper
14	545 11 33-01	Clamp - Harness	1	New part
15	545 08 10-11	Kit - Driveshaft	1	
16	530 01 58-14	Screw	4	
17	530 05 85-63	Clamp - Bracket	2	
18	545 05 85-02	Clamp - 1" Handlebar	1	
19	537 41 90-01	Kit - Switch	1	
20	537 16 07-02	Lockout - Starter Throttle	1	
21	537 17 43-01	Spring - Lockout	1	
22	503 22 10-13	Nut	1	
23	537 16 06-05	Lockout - Throttle	1	Left Hand
24	537 16 02-04	Housing - Throttle	1	New part
25	545 05 62-01	Assy - Cable Wire	1	
26	537 17 42-01	Spring - Trigger	1	
27	537 16 08-02	Trigger - Throttle	1	
28	503 21 66-18	Screw	2	
29	503 20 07-35	Screw	1	Right Hand
30	537 16 03-04	Housing - Throttle	1	New part
31	545 00 75-07	Flexshaft	1	With out warning
32	544 84 58-02	Harness	1	New part Incl.33,34
33	545 08 17-03	Kit - Shield	1	
34	530 05 22-86	Limiter - Line	1	
35	530 01 58-14	Screw	2	
36	503 89 01-01	Cup - Support	1	
37	537 28 56-01	Support - Flange	1	
38	503 85 63-01	Locknut - Blade	1	
39	530 01 60-14	Screw	1	
40	530 01 63-01	Screw	1	
41	537 23 49-01	Assy - Dustcup	1	New part
42	530 01 57-71	Screw	1	
43	530 05 75-54	Bracket - Shield	1	
44	530 09 62-95	Assy - Gearbox	1	

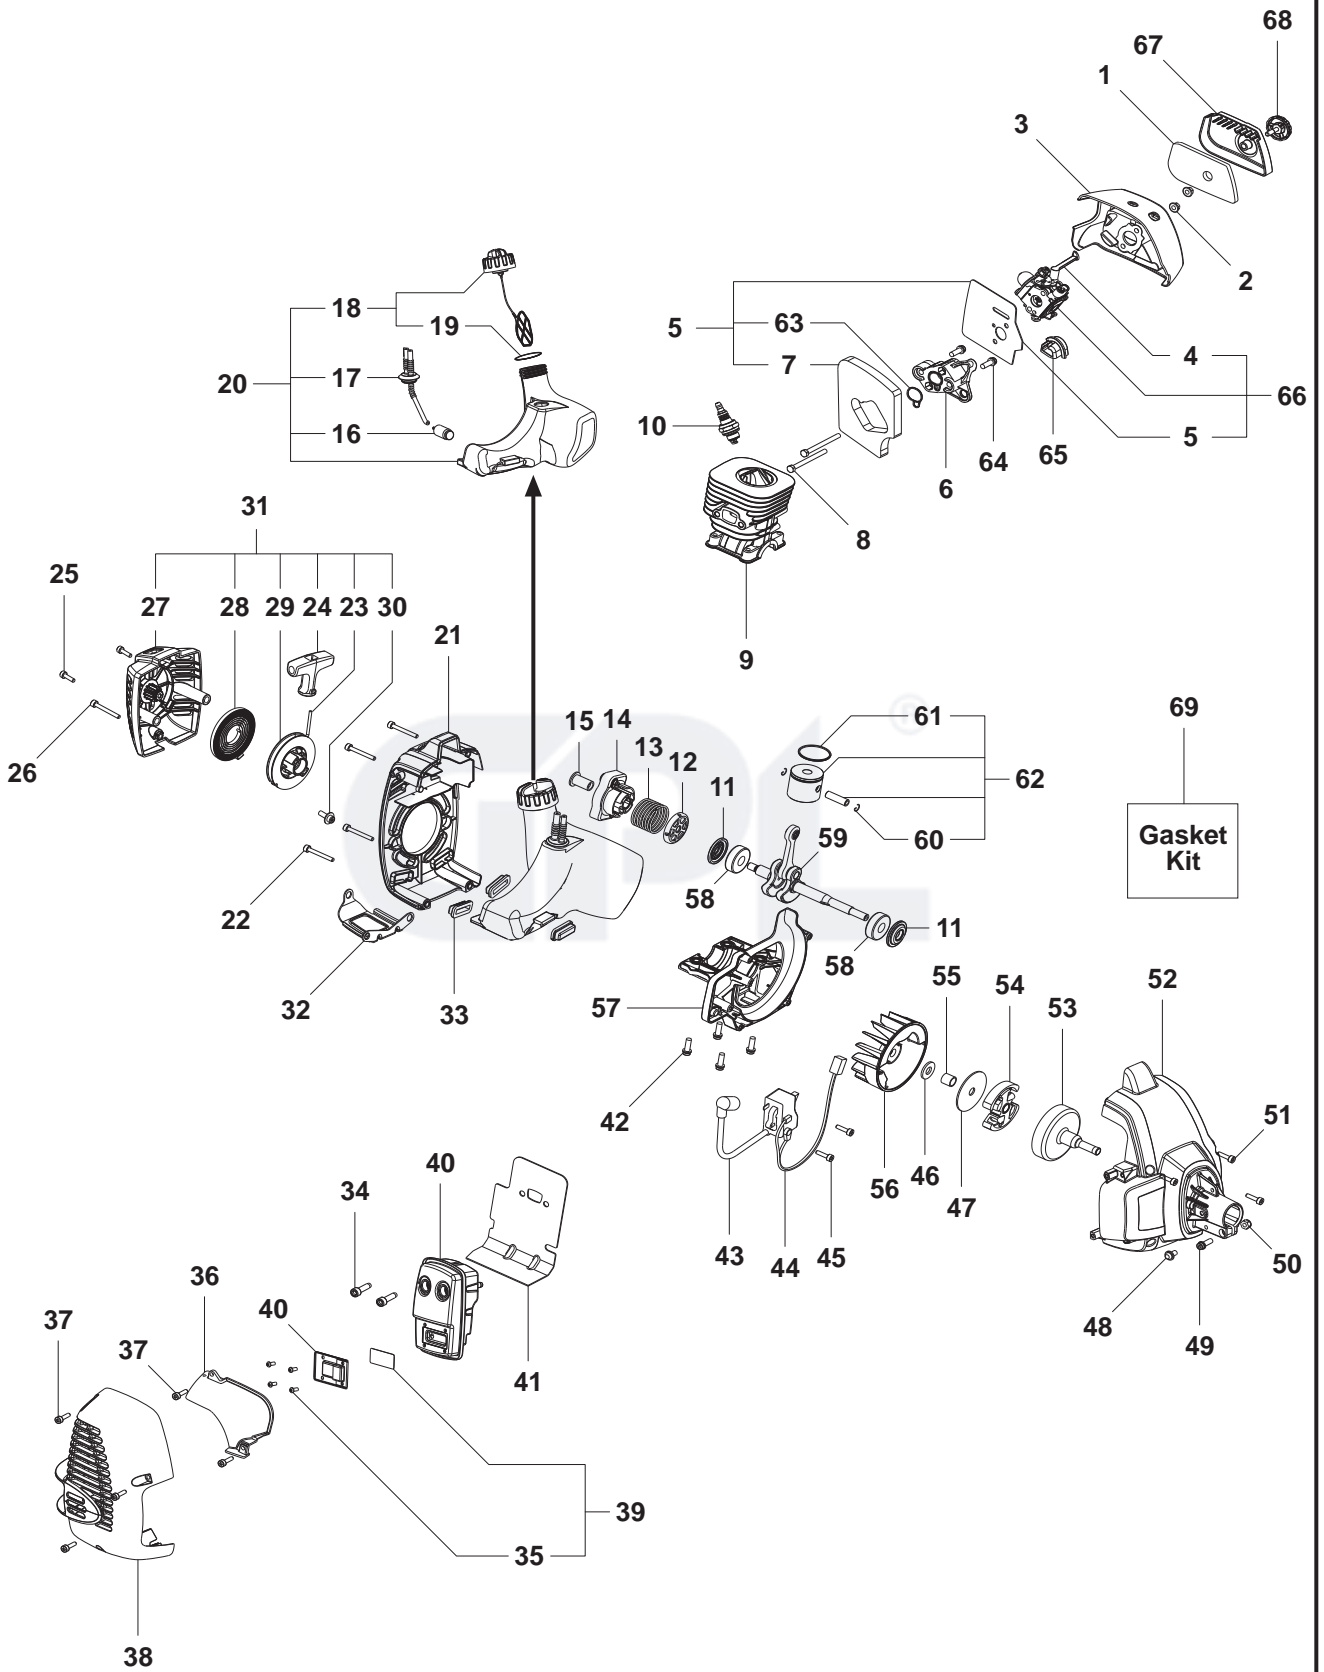

B BC2126

Pos.	Part No.	Description	Qty.	Notes
1	530 15 02-53	Filter	1	
2	530 01 61-01	Nut - Carb. Screw	2	
3	545 07 17-01	Air Box	1	
4	530 05 78-44	Lever - Choke	1	
5	545 05 04-02	Kit - Carb. Gasket	1	Incl.7,63
6	530 03 55-96	Adaptor - Carburettor	1	
7	545 03 01-01	Kit - Gasket	1	Foam.
8	530 01 64-00	Bolt	2	
9	545 00 10-01	Cylinder	1	
10	952 03 02-01	Spark plugg	1	RCJ-8Y
11	545 05 04-03	Kit - Crankshaft Seal	2	
12	530 01 64-75	Whaser - Starter	1	
13	530 01 64-50	Spring - Starter Cup	1	
14	545 10 23-02	Assy - Starter Cup	1	New part
15	530 05 98-00	Coupling - Starter	1	
16	530 09 56-46	Assy - Fuel Filter	1	
17	545 03 02-01	Kit - Fuel Line	1	
18	545 07 31-01	Assy - Cap	1	Incl.19 , w/ret.
19	530 01 92-93	O-ring - Fuel Tank	1	
20	545 07 30-01	Assy - Fuel Tank	1	Incl.16,17,18,19
21	545 06 52-01	Shroud - Rear	1	
22	530 01 64-48	Screw	4	
23	545 02 99-01	Kit - Rope	1	
24	545 04 32-01	Handle - Starter	1	
25	530 01 64-26	Screw	2	
26	530 01 64-49	Screw	1	
27	545 10 44-01	Starter Hsg	1	With eyelet.
28	545 02 98-01	Kit - Starter Spring	1	
29	545 02 97-01	Kit - Starter Pulley	1	
30	530 01 64-68	Screw	1	
31	545 10 27-01	Assy - Starter Hsg.	1	Incl.23,24,27,28,29,30
32	545 07 16-01	Plate - Wear	1	
33	530 05 97-80	Isolator - Tank	3	
34	530 05 89-82	Bolt - Muffler	2	
35	530 01 54-96	Screw	4	
36	530 15 04-40	Shield - Heat	1	
37	530 01 64-49	Screw	5	
38	545 06 54-01	Guard - Muffler	1	
39	545 03 05-01	Kit - Spark Arrestor	1	Incl.35
40	545 05 75-02	Assy - Muffler	1	New part
41	530 05 78-48	Gasket - Paper Metal	1	
42	530 01 58-97	Screw	4	
43	545 04 67-02	Module	1	
44	530 03 92-27	Assy - Leadwire	1	
45	530 01 64-56	Screw	2	
46	530 01 60-30	Washer	1	
47	530 09 41-89	Washer - Clutch	1	
48	530 01 64-69	Screw	1	
49	530 01 64-70	Screw	1	
50	530 40 30-94	Nut	1	
51	530 01 64-56	Screw	4	
52	545 07 29-01	Assy - Fan Housing	1	
53	545 10 68-01	Assy - Clutch Drum	1	New part
54	545 05 04-05	Kit - Clutch Assy.	1	
55	530 05 78-52	Spacer	1	
56	530 03 92-42	Flywheel	1	
57	545 05 46-01	Crankcase	1	
58	545 01 34-01	Bearing	2	
59	545 03 00-01	Kit - Crankshaft	1	
60	530 01 51-62	Retainer - Piston Pin	2	
61	530 01 92-83	Ring - Piston	1	
62	545 03 03-01	Kit - Piston	1	Incl.60,61
63	545 03 01-01	Kit - Gasket	1	Adaptor seal.
64	530 01 58-97	Screw	2	

B BC2126

Pos.	Part No.	Description	Qty.	Notes
65	545 11 32-01	Guide - Cable	1	New part
66	545 00 60-35	Kit - Carburettor	1	New part Incl.4,5
67	545 07 19-01	Cover - Air Box	1	
68	545 07 22-01	Assy - Knob	1	
69	545 03 01-01	Kit - Gasket	1	Incl.5,7,11,19,41,63

GPL[®]